

UNIVERSAL FREECOASTER GUARD INSTALLATION INSTRUCTIONS

INCLUDED HARDWARE:

- (1) CHROMOLY CONE NUT CORE
- (1) CHROMOLY SPACING WASHER
- (1) NYLON HUB GUARD

1

Determine if your hub requires the use of the included spacing washer:*

WASHER REQUIRED

Cinema, Primo, Fiend, and Federal Freecoasters. Refer to *Fig. 1.A.* when installing.



NO WASHER REQUIRED

Kink, Demolition, Colony, Shadow, and Cult Freecoasters. Refer to *Fig. 1.B.* when installing.



2

Remove existing stock non-drive side cone nut from the hub.

3

Place Washer, if applicable [*Fig. 1.A.*], so that it is snug against bearing. Thread included chromoly cone nut core onto the hub axle and tighten. **NOTE:** Make sure the cone nut and washer are facing the correct direction when installing [*Fig. 2*].

4

Press the nylon hub guard over the cone nut and install wheel into your frame.

IT IS RECOMMENDED THAT THIS PRODUCT IS INSTALLED BY A PROFESSIONAL BIKE MECHANIC

FIG. 1.A. INSTALLATION WITH WASHER

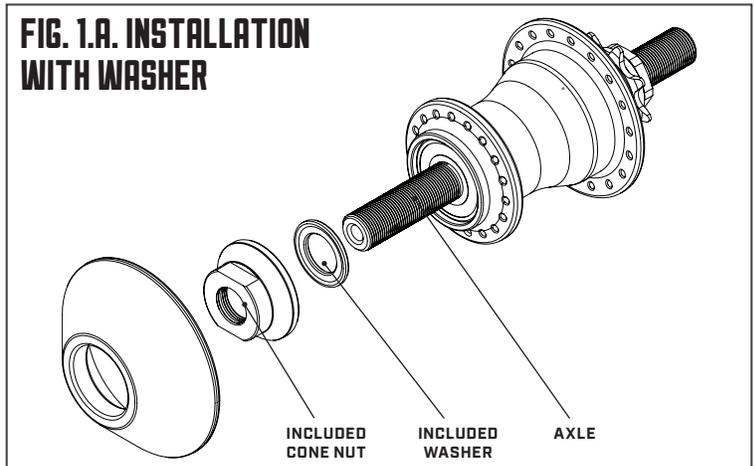


FIG. 1.B. INSTALLATION WITHOUT WASHER


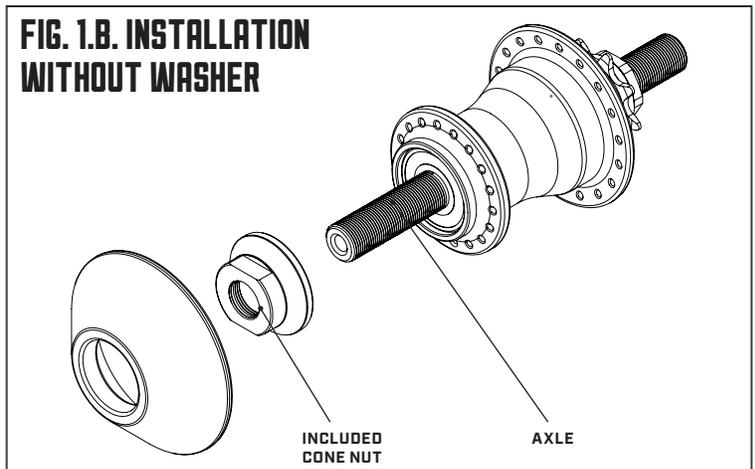


FIG. 2 CONE NUT AND WASHER

INWARDS TOWARDS HUB



NOTE: The included washer is designed to contour to the shape of the included cone nut core. When installing make sure both the cone nut core and washer (if applicable) are facing the correct direction.

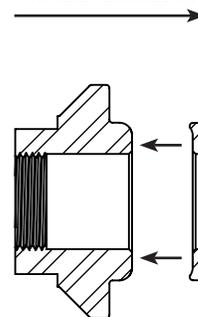